





USB

LINE IN

L/M/H
MIC GAIN

EXT MIC IN



PHONES/LINE OUT — VOLUME

ON POWER OFF
⊕ ⊖ DC9V 300mA

00:00:00

02

STOP STE-001.wav



REMAINING TIME 00:00:00

MENU

PL0 CUT	OFF
REC MODE	48/24
AGC/COMP	OFF
FILE	→

SEL () / ENTER ()

REC MODE

- WAV44.1kHz/16bit
- WAV44.1kHz/24bit
- WAV48kHz/16bit
- ▶WAV48kHz/24bit

SELECTED ENTER

REC MODE

- MP3 128kbps
- MP3 160kbps
- MP3 192kbps
- MP3 224kbps



SEL (◀) (▶) / ENTER (O)

AGC/COMP

▶OFF

AGC1 (GENERAL)

AGC2 (SPEECH)

COMP1 (GENERAL)

SEL: () / ENTER: ()

AGE/COMP

COMP2 (VOCAL)

COMP3 (DRUM)

LIMIT1 (GENERAL)

LIMIT2 (CONCERT)

SELECT CD/ENTER/O

MENU

FOLDER	82
MONITOR	ON
PLUG-IN	OFF
PRE REC	OFF



SEL (M) / ENTER (O)

MENU

AUTO REC	→
MONO MIX	OFF
L/R POSI	PLAYER
METRONOME	→

SEL: (M) (M) / ENTER: (O)

AUTO REC

MON/OFF	OFF
START LVL	-24dB
STOP LVL	-24dB
AUTO STOP	OFF

SEL (M) (M) / ENTER (O)

MENU

TUNER	→	
PLAY MODE	ALL	
AB REPEAT	→	
FLIGHT	30sec	




SEL: (M) (M) / ENTER: (O)

TUNER

PCALIB	440Hz	↑ ↓
CHROMATIC	→	
GUITAR	→	
BASS	→	


SELECT (C) / ENTER (O)

CHROMATIC TUNER

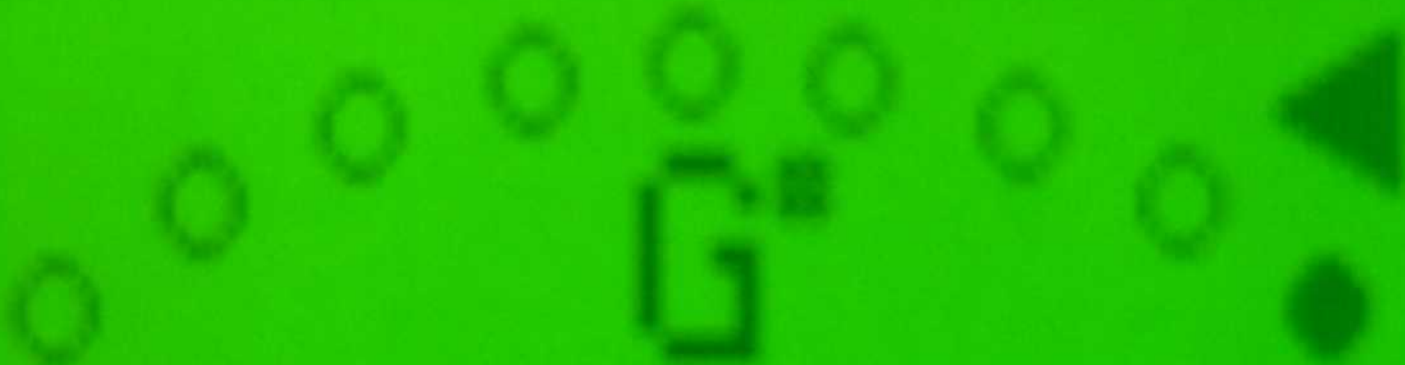

EXIT: (MENU)

MENU

CONTRAST	5	
BATTERY	ALKALI	
SD CARD	→	
USB	→	
	→	

SEL: (M) (X) / ENTER: (O)

USB

▶STORAGE →
AUDIO I/F →

SEL: (M) (M) / ENTER: (O)